



# Personalized Settings CR-V

The CR-V LX, EX, and EX-L are equipped with features that can be customized to your customer's preferences. Adjust the settings listed below. For vehicles equipped with features not listed on this sheet, more information can be found in the Owner's Manual, Quick Start Guide, and Navigation System Manual. NOTE: Default factory settings appear in **bold** print.

VIN

## ITEMS FOR PERSONALIZATION

**1** **Radio Presets** Store up to 6 AM radio stations, 12 FM stations, and 12 XM® Satellite Radio channels in the preset (1-6) buttons.

**To store a station:**

- Use the tune, seek, or scan function to tune the radio to a desired station.
- Pick a preset number button (1-6).
- Push and hold it until you hear a beep.

AM

FM1       FM2

XM1       XM2

**3** **Auto Door Lock**

**WITH VEHICLE SPEED** **Doors lock when vehicle speed reaches 10 mph.**


**SHIFT FROM "P"** **Doors lock when shift lever is moved out of Park (P).**

*To activate:*

- Apply the parking brake.
- Move the shift lever to P, and close the driver's door.
- Turn the ignition switch to the ON (II) position.
- Push and hold the front of the master door lock switch on the driver's door. You will hear a click.
  - Keep holding the switch until you hear another click (after about 5 seconds).
- Release the switch and turn the ignition switch to the LOCK (0) position within 5 seconds.

OFF **Auto door lock function is deactivated.**

**Consult your Quick Start Guide and/or Owner's Manual to find out how to turn the feature off.**

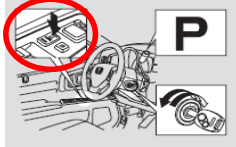

**4** **Auto Door Unlock**

**DRIVER DOOR SHIFT TO "P"** **Driver's door unlocks when shift lever is moved into Park (P).**

**ALL DOORS SHIFT TO "P"** **All doors unlock when shift lever is moved into Park (P).**

*To Activate:*


- Apply the parking brake.
- Move the shift lever to P, and close the driver's door.
- Turn the ignition switch to the ON (II) position.
- Push and hold the rear of the master door lock switch on the driver's door. You will hear a click.
  - Continue holding until you hear two or more clicks (after about 10 seconds) to activate **all doors unlock**.
- Release the switch and turn the ignition switch to the LOCK (0) position within 5 seconds.

**DRIVER DOOR IGNITION OFF** **Driver's door unlocks when ignition is turned to LOCK (0).**

**ALL DOORS IGNITION OFF** **All doors unlock when ignition is turned to LOCK (0).**

OFF/DEACTIVATED **Auto door unlock function is deactivated.**



**Consult your Quick Start Guide and/or Owner's Manual to find out how to turn the feature off.**

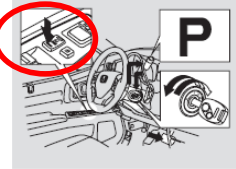

**5** **NAVIGATION SYSTEM**

Set address for "go home" voice recognition command, and GO HOME selection in the navigation system.

- Push the **INFO** button and use the joystick or touch screen to select **SET-UP** in the navigation system
- Use the joystick or touch screen to select **PERSONAL INFORMATION**
- Use the joystick or touch screen to select **HOME ADDRESS**.
- Select **Edit NAME/ADDRESS** and enter the customer's home address.
- Demonstrate the "Go Home" calculation.
- Show the customer how to correctly use the speech recognition buttons and voice commands.
- Show the customer the location of the microphone on the ceiling (speak in a **normal voice**).
- Show the customer the *Commonly Used Voice Commands* in the Quick Start Guide.

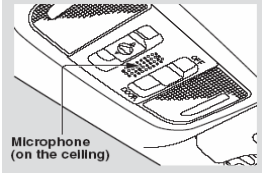\* **Sales Consultant: Personalized settings instructions can be found in your Honda Vehicle Delivery Training in the iN.**

Customer's Name	Sales Consultant	Date
<input type="text"/>	<input type="text"/>	<input type="text"/>